

Programming Manual

RIB Sun 433 MHz

Programming of your new remote control:

There are several methods for programming your new remote control.

Remote-to-remote programming:

1. Open the casing of your already-programmed remote control.
2. On the circuit board of your already-programmed remote control, you will see a row of small numbered programmable switches. They are in the ON or OFF position. The positioning of these small programmable switches represents your system code.
3. Press the left button on your new remote control.
4. In the next few seconds, press the right button on your new remote control the same time. Keep it pressed down for few seconds. The LED on your new remote control illuminates. Wait and it turns off.
5. Enter your system code in the following manner :
 - The left button of your new remote control corresponds to the OFF position of the switches
 - The right button of your new remote control corresponds to the ON position of the switches

Please note: for certain models, the buttons are swapped. The left button will correspond to the ON position and the right button to OFF.

6. Wait 10 seconds.
7. Your new remote control is programmed.

Receiver-based programming:

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, you will see a row of small programmable numbered switches. They are in the ON or OFF position. The positioning of these small programmable switches represents your system code. Note down this code.
3. Press the left button on your new remote control.
4. In the following few seconds, press the right button on your new remote control at the same time. Keep it pressed down. The LED light on your new remote control illuminates. Wait few seconds. It turns off.
5. Enter your system code in the following manner :
 - The left button of your new remote control corresponds to the OFF position of the switches
 - The right button of your new remote control corresponds to the ON position of the switches

Please note: for certain models, the buttons are swapped. The left button will correspond to the ON position and the right button to OFF.

6. While the tenth impulse, the LED light lit constantly. Wait 10 seconds.
7. Your new remote control is programmed.