

Telcon 500 MK2 – NEW FUNCTIONS

Two new functions are available;

1. The ability to add administrator and authorised telephone numbers by SMS text message straight out of the box.
2. Automatic sending of an SMS text message 'GSM OK' once a week to the administrators telephone numbers, this prevent the SIM being disconnected by the network provider because of 'lack of use'.

SMS Configuration Commands

Master Administrator

The master administrator number must be entered into position 0, the master administrator can change the password, add and delete administrator numbers and add and delete authorised telephone numbers.

Administrator

Two administrator numbers can be added, they must be entered in position 1 and 2, the administrators can only add and delete authorised telephone numbers.

Adding the Master Administrator Number

Note that a + must be added before the number.

To add the Master Administrator number into the 0 position in the memory the following SMS message is sent.

123456P#000=+xxxxxxx

123456 is the default password, 000 is the position in the memory to store the number +xxxxxxx is the Master Administrators telephone number.

IMPORTANT – The Master Administrator number must be added using the telephone that belongs to the Master Administrators telephone number.

Adding the Administrators and Authorised Numbers

To add the Administrators numbers into the 001 and 002 positions in the memory the following SMS messages are sent.

123456P#001=+xxxxxxx and 123456P#002=+xxxxxxx

123456 is the default password, 001 and 002 are the positions in the memory to store the numbers, +xxxxxxx are the Administrators telephone numbers.

Authorised numbers are used using the same format in positions 003 to 499

Changing the password

The password can only be changed by the Master Administrator. To change the password the following SMS message is sent.

123456PPSW=654321

123456 is the default password, PPSW is the change password command and 654321 is the new password.

Note: The password can also be changed using the configuration software, the password is stored in position 500, to change it go to position 500 and delete the existing password, now enter the new one and 'save to device'.